

Welcome to Prijector



INSTRUCTIONAL MANUAL


GUEST MODE

Prijector

www.prijector.com

Things to Know

- Prijector and your laptop should be on the same subnet
- Same network different subnet click here
<http://prijectr.com/support/knowledgebase.php?article=31&suggest=1>
- For VGA connection buy a HDMI to VGA Adapter
(Ignore if you are connecting to HDMI)
- HDMI IN is for integrating your video conferencing equipment.
(Ignore if you dont have Video Conferencing Equipment)
- You need Remote Control Or Standard Computer Mouse to setup
Prijector for the first time
- For Video Manuals and how to use Remote Control click here
<https://prijector.com/installationvideos/index>

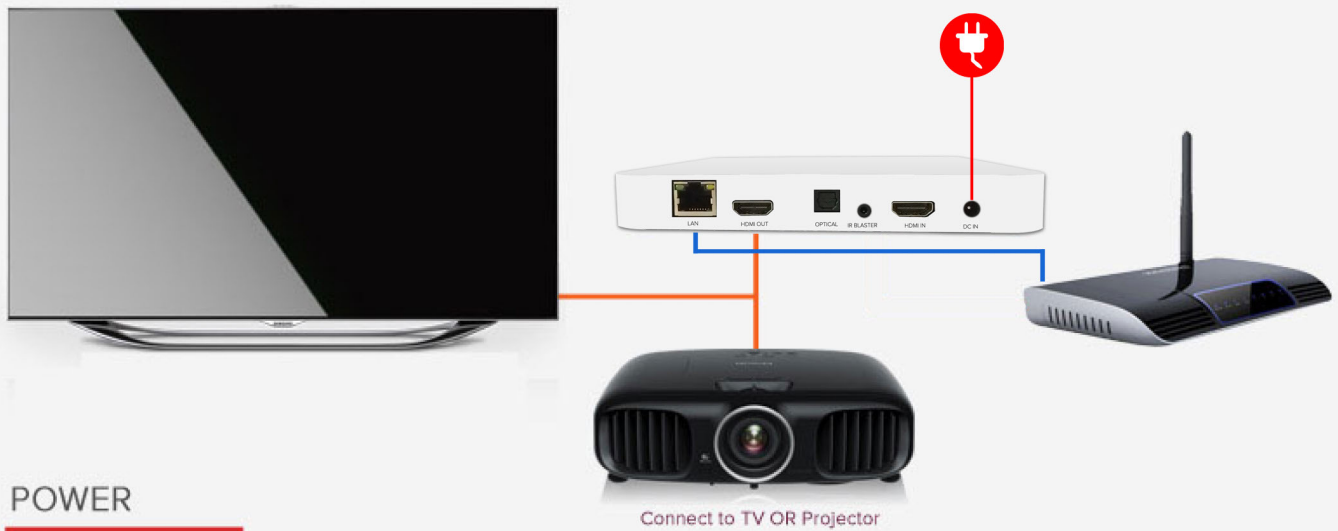


1. Connecting Prijector



2. Prijector default mode is Guest Mode




3. If you don't see Prijector Wifi and Password click on Guest Mode

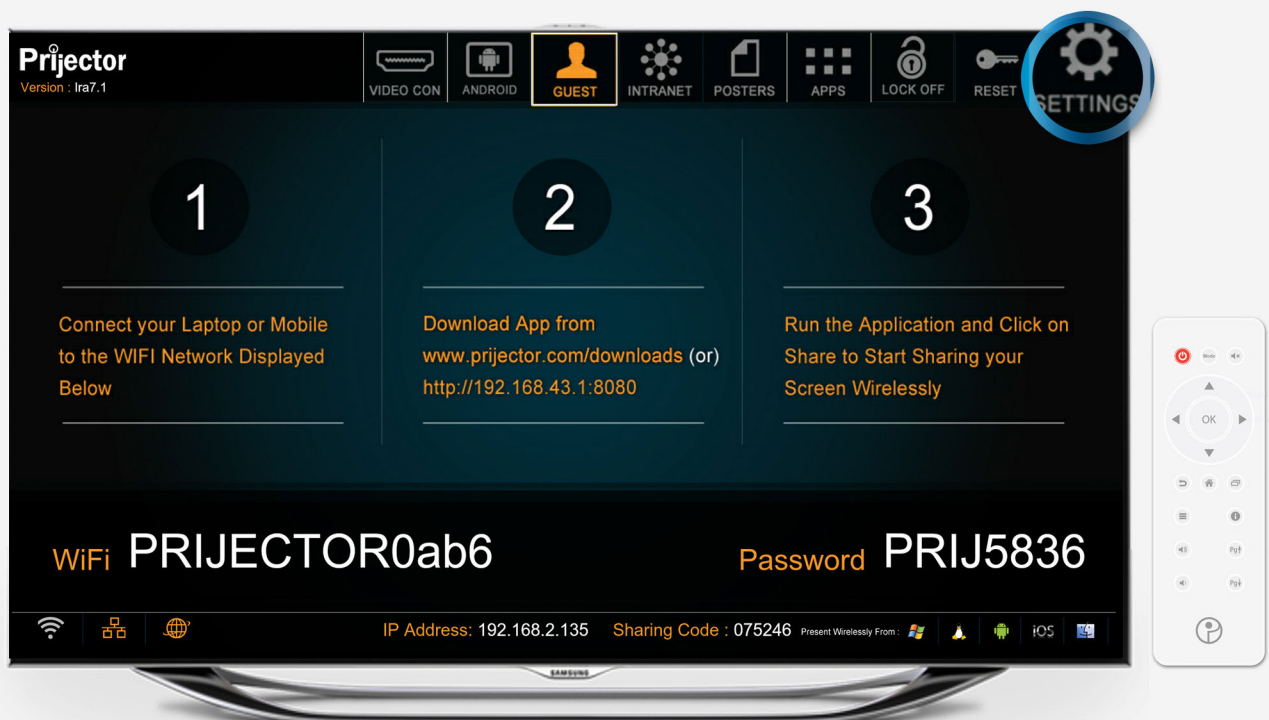

For more help visit <https://prijector.com/installationvideos/index>

4. You should see Prijector Wifi and Password now click on Settings

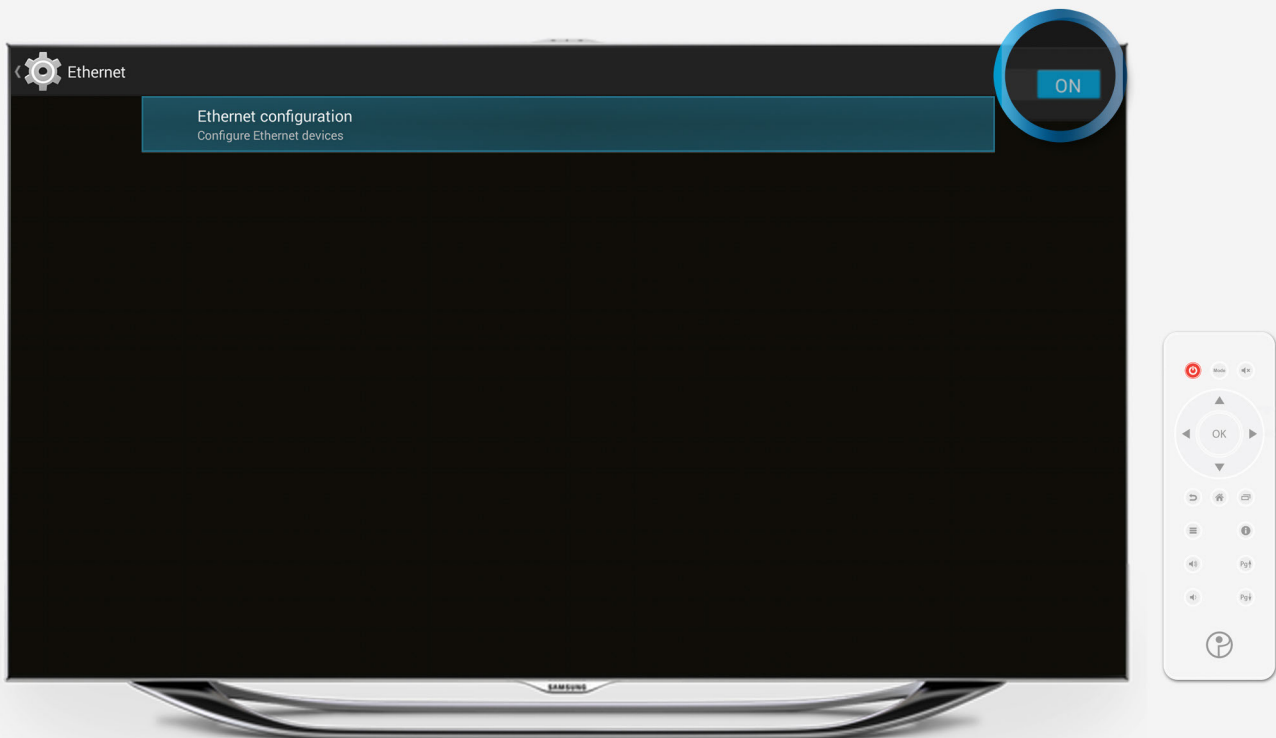


Press the **Back Button** on the **Remote** or **Right Click** on the **Mouse**

5. Configure Ethernet and Network Settings



6. You should see this screen now

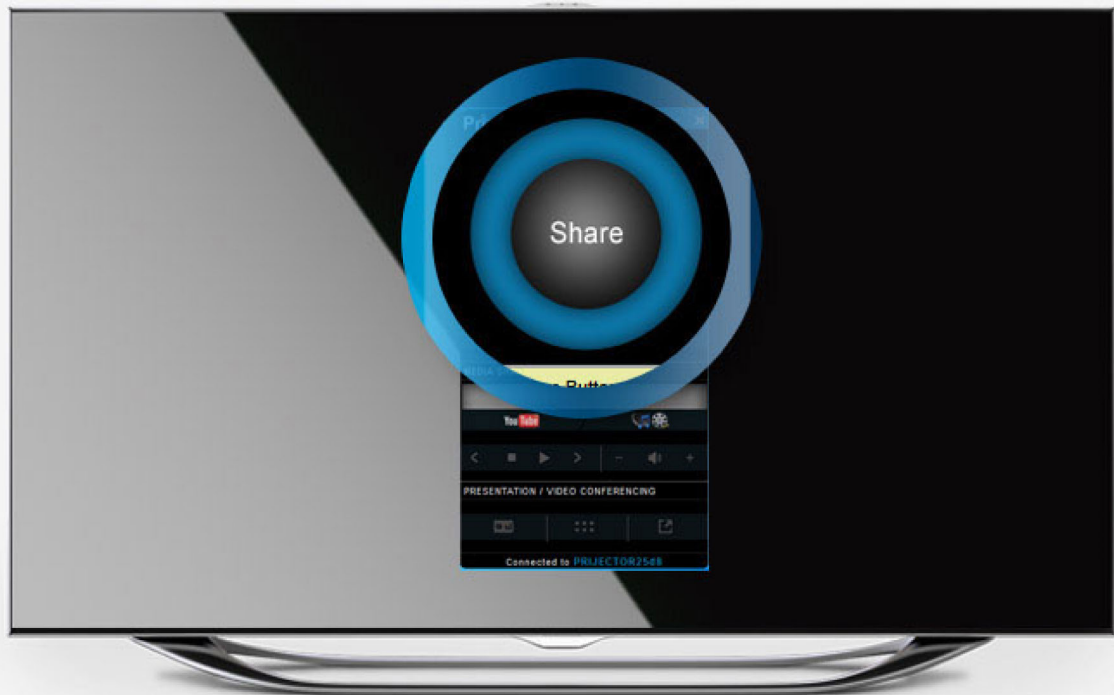

Visit Prijector.com to Download the App

7. Open the Prijector App and click on Share



8. Prijector is now Sharing