

Welcome to Prijector



INSTRUCTIONAL MANUAL


INTRANET MODE

Prijector

www.prijector.com

Things to Know

- Prijector and your laptop should be on the same subnet
- Same network different subnet click here
<http://prijectr.com/support/knowledgebase.php?article=31&suggest=1>
- For VGA connection buy a HDMI to VGA Adapter
(Ignore if you are connecting to HDMI)
- HDMI IN is for integrating your video conferencing equipment.
(Ignore if you dont have Video Conferencing Equipment)
- You need Remote Control Or Standard Computer Mouse to setup
Prijector for the first time
- For Video Manuals and how to use Remote Control click here
<https://prijector.com/installationvideos/index>

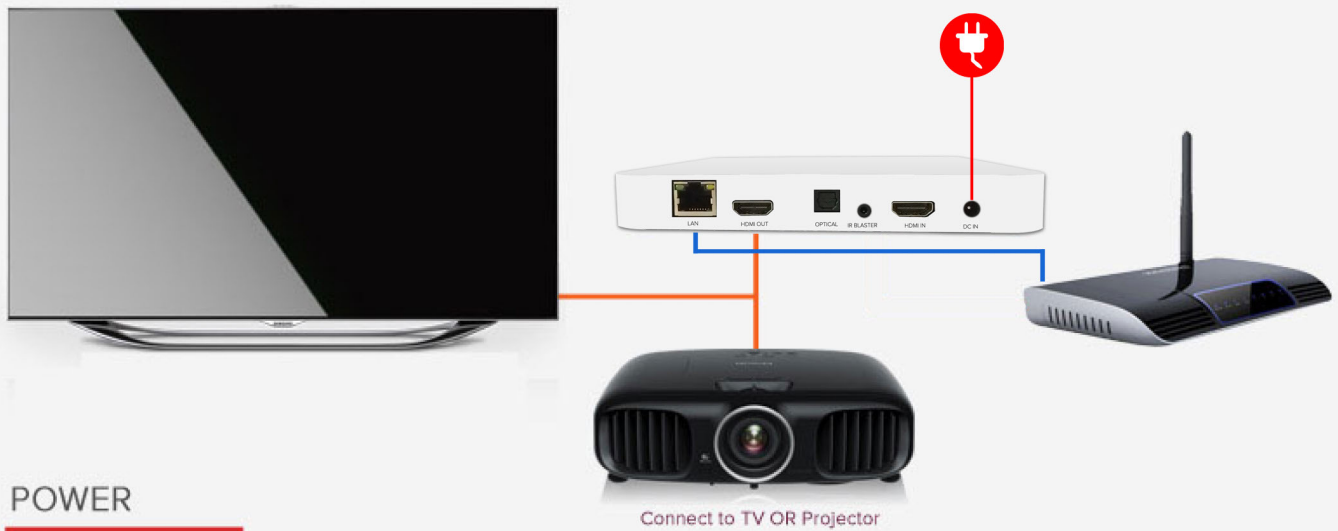


1. Connecting Prijector




2. This is what you should see on the screen when you power on



3. Use the Remote or Mouse & Click on Intranet Mode

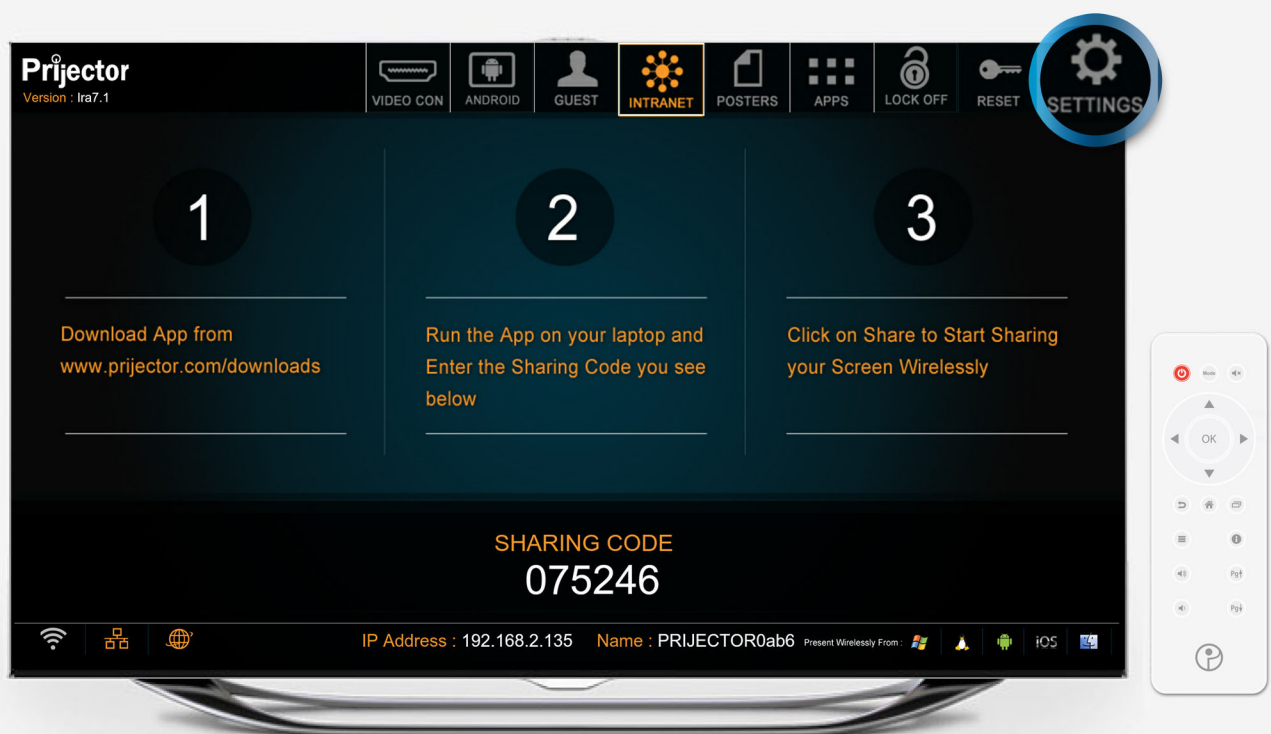


4. Click on Settings

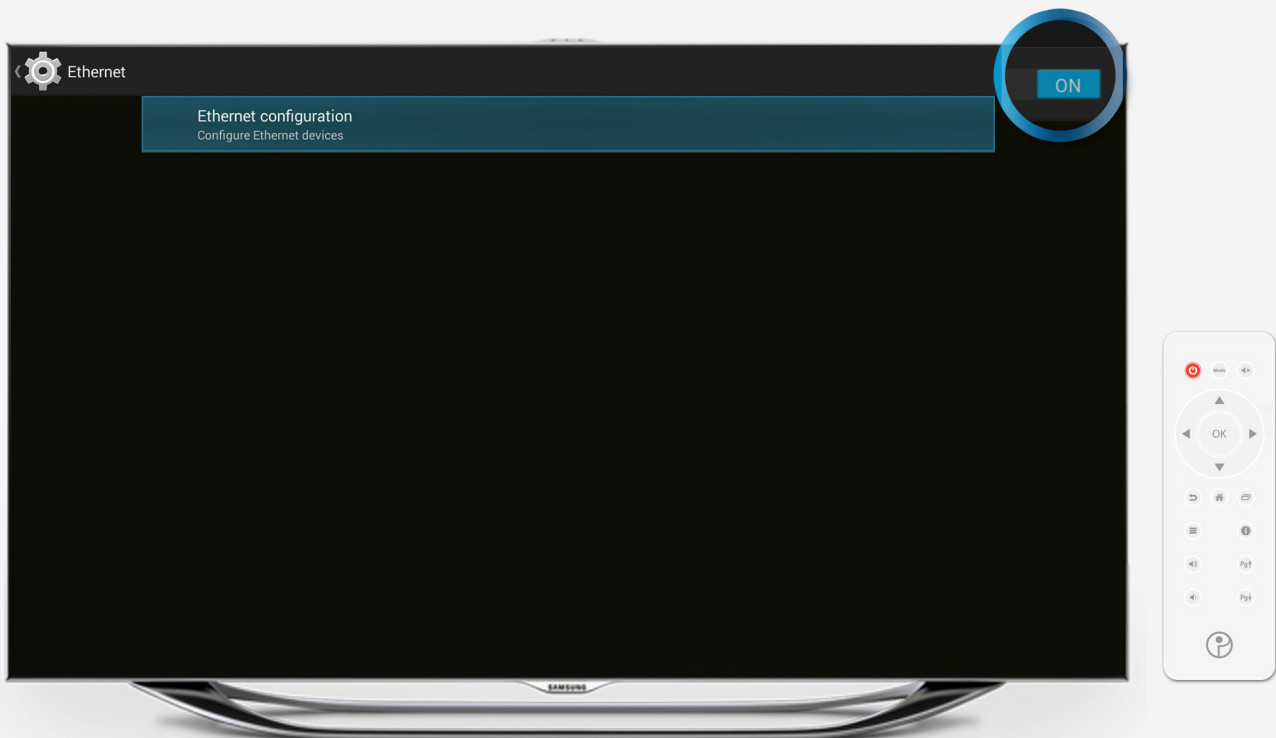

Press the **Back Button** on the **Remote** or **Right Click** on the **Mouse**

5. Configure Ethernet and Network Settings

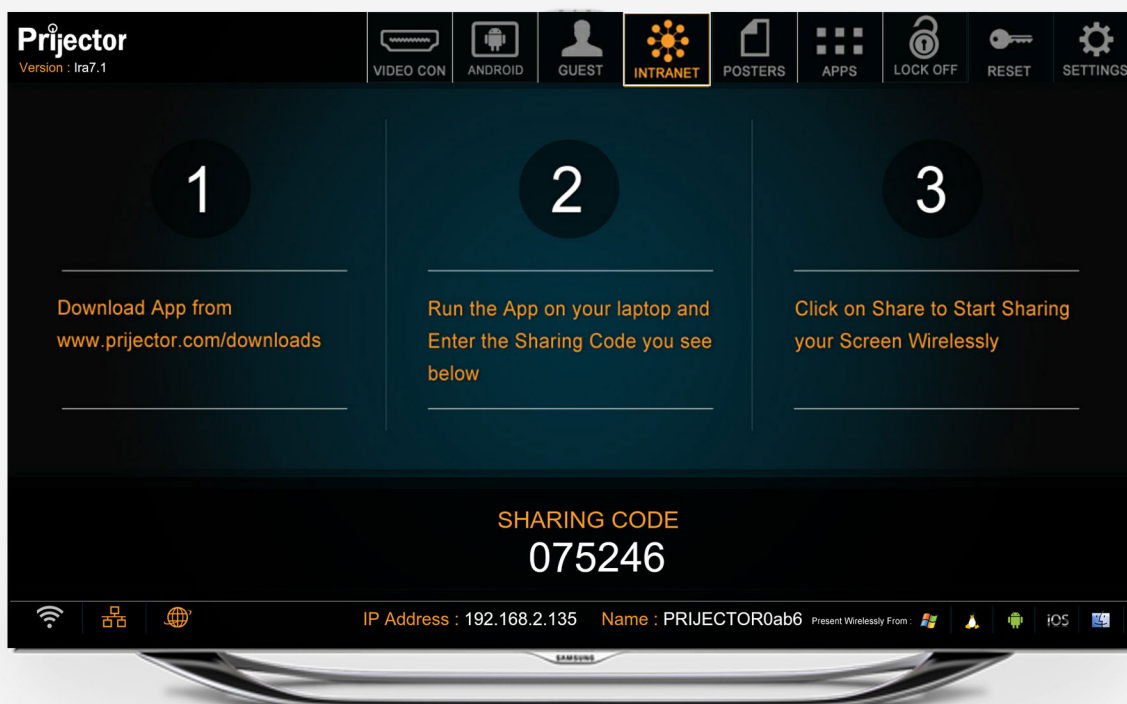

6. You should see this screen now



Visit Prijector.com to Download the App

7. Enter Sharing Code or IP Address, click Share



8. Prijector is now Sharing